

# TESTANDRAIN® MODEL 1000 VALVE OPERATING INSTRUCTIONS

## A. TO TEST:

1. Turn valve handle counterclockwise from "Off" to "Test". The handle will stop automatically.
2. After test is completed, return handle to "Off".

## B. TO DRAIN:

1. Turn handle counterclockwise from "Off" to "Test". The handle will stop automatically.
2. Depress "Push" button and turn handle to "Drain".
3. When system is empty, return handle clockwise to "Off" position.

### CALIFORNIA PROPOSITION 65 WARNING


**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (California law requires this warning to be given to customers in the State of California.)

For more information: [www.wattsind.com/prop65](http://www.wattsind.com/prop65)

### AGF MANUFACTURING, INC.

10 Quaker Lane  
Malvern, PA 19355  
Telephone: (610) 240-4900  
Fax: (610) 240-4906  
[www.testandrain.com](http://www.testandrain.com)

LIMITED WARRANTY: AGF Manufacturing, Inc. warrants each product against defects in material and workmanship for a period of one year from the date of original shipment. In the event of such defects within the warranty period, the Company will, at its option, replace or recondition the product without charge. This shall constitute the exclusive remedy for breach of warranty, and the Company shall not be responsible for any incidental or consequential damages, including, without limitation, damages or other costs resulting from labor charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemicals or any other circumstances over which the Company has no control. This warranty shall be invalidated by any abuse, misuse, misapplication or improper installation of the product. THE COMPANY MAKES NO OTHER WARRANTIES EXPRESS OR IMPLIED EXCEPT AS PROVIDED IN THIS LIMITED WARRANTY.

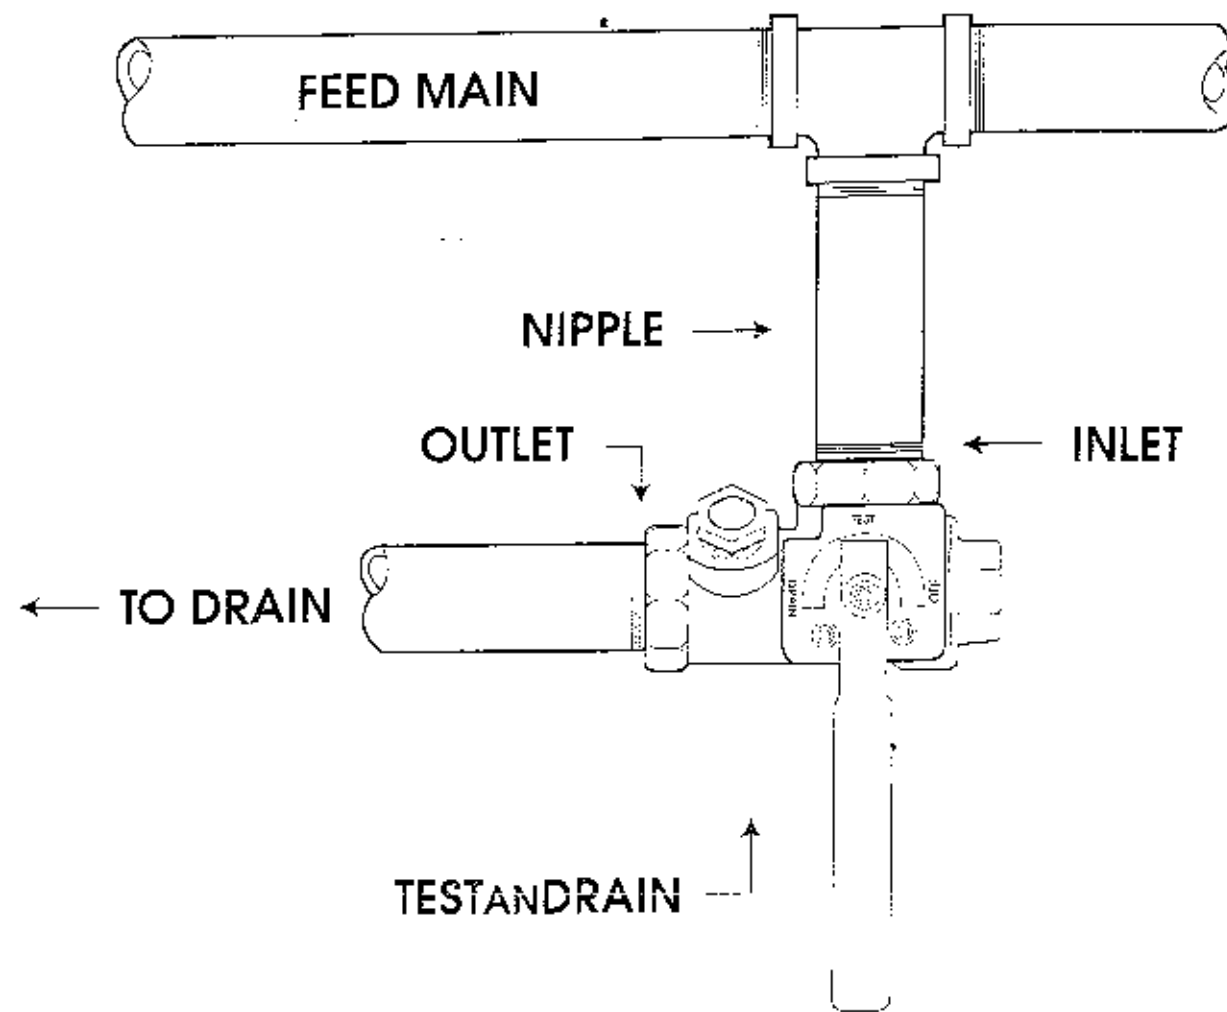

## INSTALLATION INSTRUCTIONS FOR TESTANDRAIN™ MODEL 1000

1. CHECK THE INDICATING PLATE FOR THE CORRECT ORIFICE SIZE. 3/8", 7/16", 1/2", 17/32", 5/8"(ELO), 3/4"(ESFR).
2. THREAD THE PIPE NIPPLE INTO THE INLET OF THE TESTANDRAIN.
3. THREAD THE PIPE NIPPLE AND THE TESTANDRAIN INTO THE OUTLET ON THE FEED MAIN.
4. THREAD PIPING FROM OUTLET OF TESTANDRAIN TO AN ACCEPTABLE DRAIN FIXTURE OR ACTIVE EXPRESS DRAIN AS REQUIRED.